GAMES TOWER AND CHARGER

For: PlayStation®4

User Manual

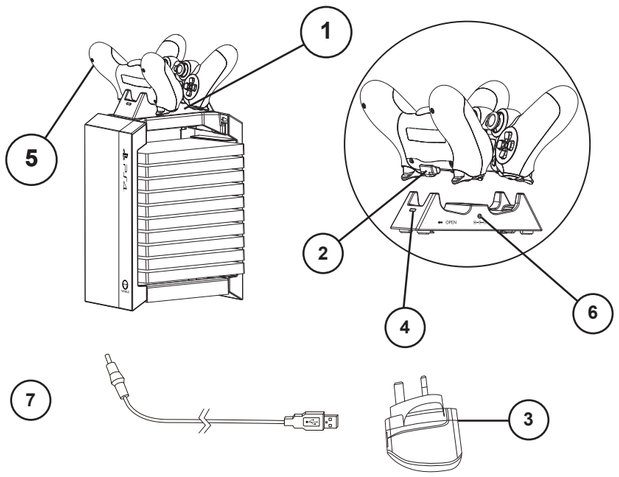

TECHNICAL FEATURES

1. Charging Base
2. Micro USB adapters for DUALSHOCK®4 Wireless Controllers (not suitable for any other brand of controller)
3. Power adapter
4. Operation and charging indicator LEDs
5. Charging positions for DUALSHOCK®4 Wireless Controllers
6. DC In input
7. DC 5V connector
8. Clips (To hold the charging wire)

VERTICAL GAME STORAGE PARTS:

1 x Top Section - (8)
2 x Bottom Section - (9)
1 x Left Side Section - (10)
1 x Right Side Section - (11)
Clips (To hold the charging wire) - (12)

Vertical Game Storage Assembly

- Slide the 2 x Bottom sections (9) into the Left Side section (10) and Top section (8) as shown
- Carefully position Right side section (11) in line with assembly and attach firmly
- Do not apply excessive force when attaching sections. They should slide together with relative ease.
- Position the game storage assembly in a standing position then place the Charging Base (1) on top and slide it to the left until it locks into place. This is a tight fit and once locked in place cannot be removed again unless unlocked by sliding to the right.

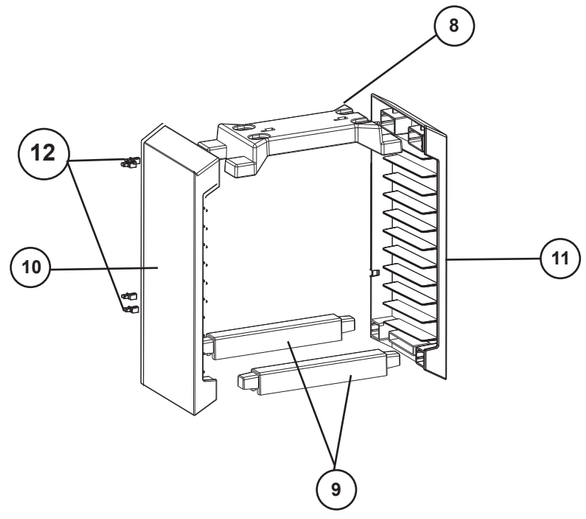

WARNING

- Before using this product, read through this documentation carefully.
- Keep the product in a dry place and do not expose to dust or sunlight.
- Do not twist and do not pull too hard on the connectors and cables.
- Do not spill liquid on the product and its connectors.
- Do not short-circuit this product.
- Never disassemble burn or expose this product to high temperatures.
- Never use any other adapter than the power adapter included with the PS4™ Games Tower and Charger.

INSTALLING THE ADAPTER

- Connect the Micro USB adapter (2) to the Micro-USB port on the DUALSHOCK®4 Wireless Controller.

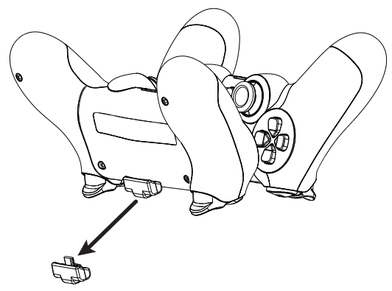

SETTING THE CHARGING MAT FOR USE

1. Connect the DC 5V connector (7) to the DC input (6) located on the side of the Charging Base

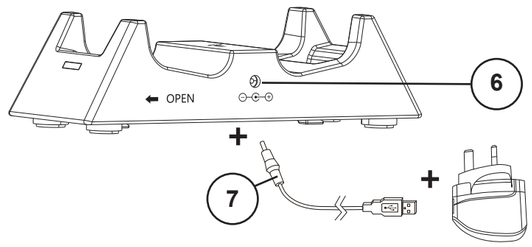

2. Place the Charging Base on top of Games Tower Assembly.
3. Plug the power adapter (3) into an electrical outlet.

CHARGING DUALSHOCK®4 WIRELESS CONTROLLERS ON THE CHARGING MAT

- Place your DUALSHOCK®4 Wireless Controller equipped with the Micro USB adapter (2) directly onto the Charging Base (1), on top of, and in the same position as the controller drawings.

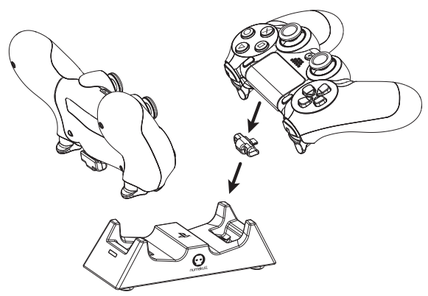

Notes:

PS4™ console USB port only supports charging of one DUALSHOCK®4 Wireless Controller. If two DUALSHOCK®4 Wireless Controllers are attached, the USB port will auto shut down without doing any harm to the console itself.

LED STATUS INDICATORS:

The charging LEDs (4) will display a constant **GREEN** to indicate charging and will turn to **BLUE** once fully charged. A **FLASHING GREEN** LED indicates an error with the product. Once they are fully charged please remove the DUALSHOCK®4 Wireless Controllers from the Charging Base (1).

If **NO** LED appears this means no charging is occuring or the Charging Base (1) is idle.

TROUBLESHOOTING

Problem	Likely cause
The LEDs on the charging base (1) do not light up…	• The DC In 5V connector (7) is not correctly inserted in the DC in input (6) on the charging base (1). • The charging base (1) is not plugged into an electrical outlet. • The DUALSHOCK®4 Wireless Controller is not properly placed on the magnetized charging position on the charging base (1). • The wireless adapter is not properly inserted on the DUALSHOCK®4 Wireless Controller

TECHINICAL SUPPORT

If you encounter a problem with your product, please go to: http://www.numskull.co.uk and click Technical Support. From there you will be able to access the 'Frequently Asked Questions' section, and our contact details.

Alternatively you can contact us at:

Email: hello@rubberroad.co.uk

UK Telephone: 01707 800881
International Telephone: +441707 800881

WARRANTY INFORMATION

Worldwide, Rubber Road Ltd warrants to the consumer that this Numskull product will be free from material defects and manufacturing flaws for a period of one (1) year from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase (or any other location indicated by Technical Support).

Within the context of this warranty, the consumer's defective product will, at Technical Supports option, be either repaired or replaced. Where authorized by applicable law, the full liability of Rubber Road and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Numskull product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This Warranty shall not apply: (1) if the product has been modified, opened, altered or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Rubber Road, said software being subject to a specific warrant provided by it's publisher.

COPYRIGHT

" ", "PlayStation","PS4", "DUALSHOCK" and "△○×□" are registered trademarks of Sony Computer Entertainment Inc. All Rights Reserved. For use exclusively with PlayStation®4. Made in China. Licensed for sale in PAL markets. This product is Manufactured by Rubber Road Ltd (AL7 1HH) under license of Sony Computer Entertainment Europe Limited.

ENVIRONENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling.
This is confirmed by the symbol found on the product, user manual or packaging. Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment. Please contact your local authorities for information on the collection point nearest you.

Retain this information, colors and decorations may vary.

© Rubber Road - www.rubberroad.co.uk
Numskull - www.numskull.co.uk

Official Licensed Product

numskull
INSPIRATION DESIGNED

for PS4™